

Definitions

The following defined terms and symbols are used throughout this manual to bring attention to the presence of hazards of various risk levels, or to important information concerning the life of the product.



- Warning Symbol: Indicates presence of hazards which can cause severe personal injury, death or substantial property damage if ignored.



- Double Insulated

**INSTALLATION
CATEGORY II**

- Local level appliances

Room Temperature Unit (RTU) 062e



The kanmor Room Temperature Unit (RTU) 062e consists of an air temperature sensor, a liquid crystal display (LCD) and four buttons. These buttons and the LCD are used to set and view the desired room temperature. The RTU's LCD displays the current room temperature, the outdoor air temperature and a number of other items.

The 062e can only be used with kanmor controls that are tN1 capable (*tN1* or *tN1/tN2* terminals). The items that the 062e displays depends on the type of kanmor control that the RTU is connected to. To determine the exact items that are displayed by the RTU, refer to the Data Brochure for the control that the 062e is to be used with. In cases where a restricted temperature range is required, the RTU's range can be limited by changing the access level of the RTU.

Room Temperature Unit (RTU) 063e




The kanmor Room Temperature Unit (RTU) 063e consists of one internal air sensor, three remote temperature sensor inputs, a liquid crystal display (LCD) and four buttons. These buttons and the LCD are used to set and view the desired room temperature. The RTU's LCD displays the current room temperature, the outdoor air temperature, temperatures at the remote air or slab sensors, and a number of other items.

The 063e can only be used with kanmor controls that are tN1 capable (*tN1* or *tN1/tN2* terminals). The items that the 063e displays depends on the type of kanmor control that the RTU is connected to. To determine the exact items that are displayed by the RTU, refer to the Data Brochure for the control that the 063e is to be used with. In cases where a restricted temperature range is required, the RTU's range can be limited by changing the access level of the RTU.

Installation

STEP ONE — REMOVING THE FRONT COVER —


Place a small screwdriver or similar object into the small slot located in the top of the RTU enclosure. Push the screwdriver down against the plastic tab and pull the top of the front cover so that it pivots around the bottom edge of the RTU. The back cover provides the base to which the front of the RTU mounts. Store the front of the RTU in a safe place until wiring must be completed.

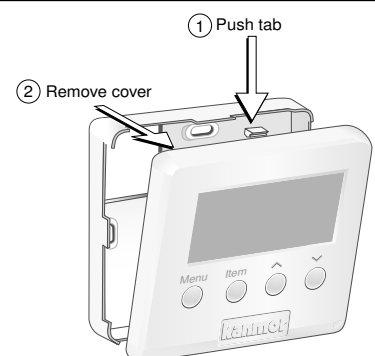

STEP TWO — MOUNTING THE RTU

The RTU should be installed on an interior wall of the desired zone to be controlled. Do not mount the RTU in a location that may be affected by localized heat sources or cold drafts. It may be necessary to install a draft barrier behind the enclosure in order to prevent air from blowing through the wiring hole and affecting the RTU reading.


Mount the RTU directly to the wall using two #6-1" screws. The screws are inserted through the mounting holes and must be securely fastened to the wall. If possible, at least one of the screws should enter a wall stud or similar surface. If local code requires that the RTU be mounted to an electrical box, use the enclosed Wall Plate 008e. This plate will mount to the electrical box and the RTU will then mount to the plate. Ensure that the electrical box does not provide cold air to the RTU.

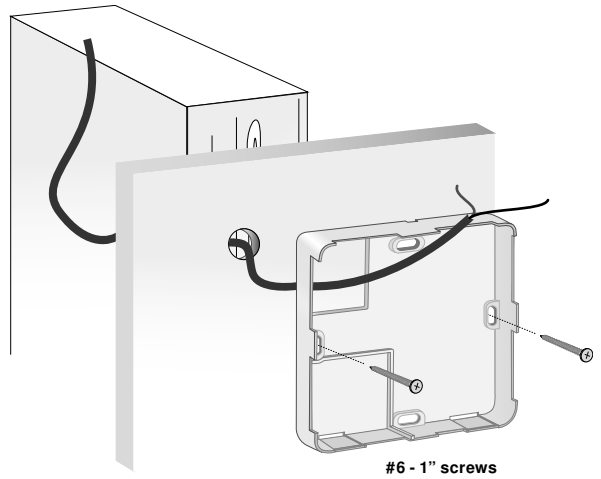

! STEP THREE — WIRING THE RTU

Run 18 AWG twisted pair or similar wire between the RTU and the control. The wires are to be stripped to a length of 3/8" (9 mm). Insert the wires through the hole provided in the back of the RTU enclosure and connect them to the *Com* and the *tN1* terminals. Do not run the wires parallel to telephone or power lines as this may interfere with the operation of the RTU. If the RTU wires are located in an area with strong sources of electromagnetic noise, shielded cable should be used or the wires can be be run in a grounded metal conduit.

NOTE: Do not apply power to the RTU. The RTU is powered by the control. The connection between the control and the RTU is polarity sensitive. The *Com* terminal of the RTU must be connected to the *Com* terminal of the control and the *tN1* terminal of the RTU must be connected to the appropriate *tN1* terminal of the control. If the wires are reversed, the display on the RTU will remain blank and the control will display a short circuit error for the *tN1* device.

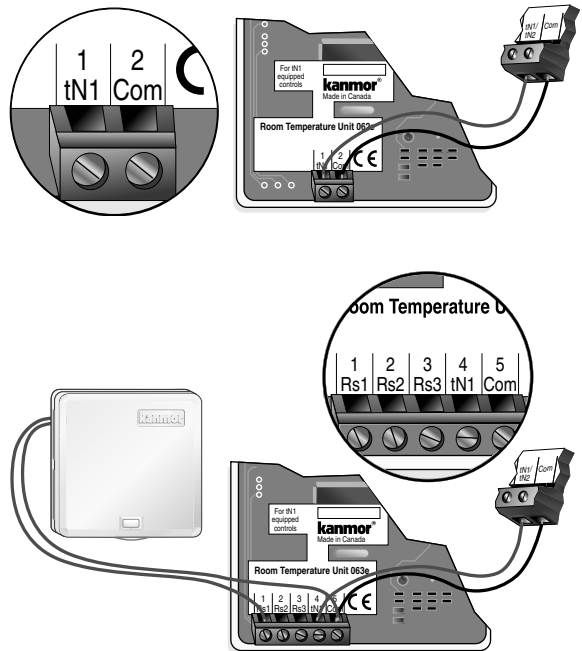


! STEP FOUR — REMOTE SENSORS TO THE 063e

Remote indoor sensors can be connected to the 063e to average the air temperature reading. Typically, multiple remote sensors are used in large open areas in a building to get an average indoor air temperature. Any type of kanmor 10K sensor can be connected to the input(s) on the 063e.

Room or Slab Temperature Control using a Slab Sensor


The RTU 063e can be configured for slab and air temperature control using a slab sensor connected to the *Rs3* and *Com* terminals (3 & 5) and the air sensor in the RTU. The control that the 063e is connected to must be configured to support this feature. The minimum and maximum slab temperature and air temperature settings are adjusted at the RTU.

If the air temperature sensor at the RTU is turned off, the air temperature is ignored.

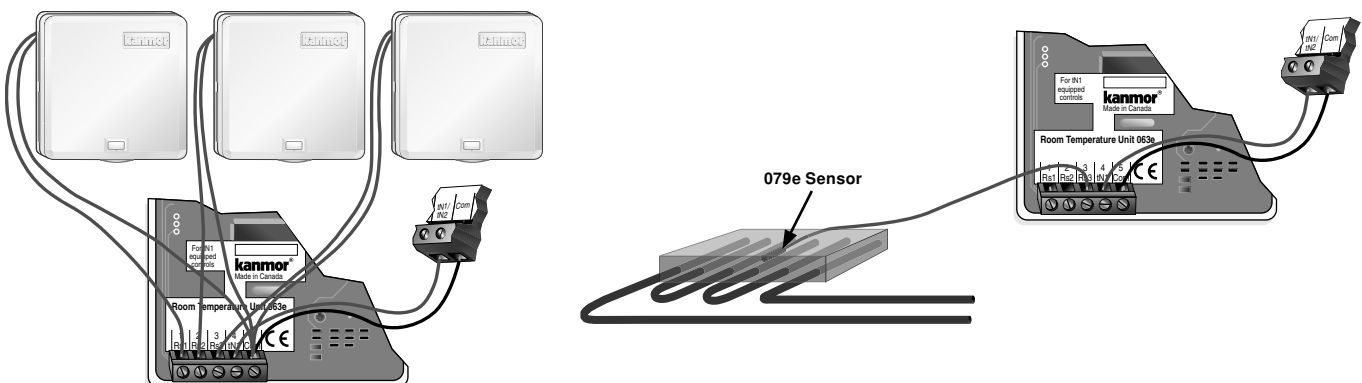


Averaging Slab Temperature

The slab sensor can only be connected to the Rs3 input on the 063e. If you wish to average slab temperatures, connect slab sensors in a series / parallel arrangement as shown. The 063e will see one average slab temperature and respond accordingly.

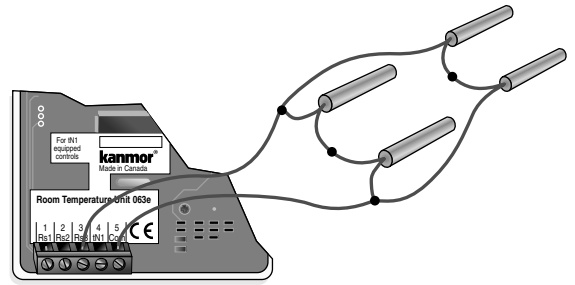

STEP FIVE — INSTALLING THE FRONT COVER

Align the hinges on the bottom of the front cover with the bottom of the RTU mounting base. Pivot the front cover around the bottom hinges and push the top against the mounting base until it snaps firmly in place.

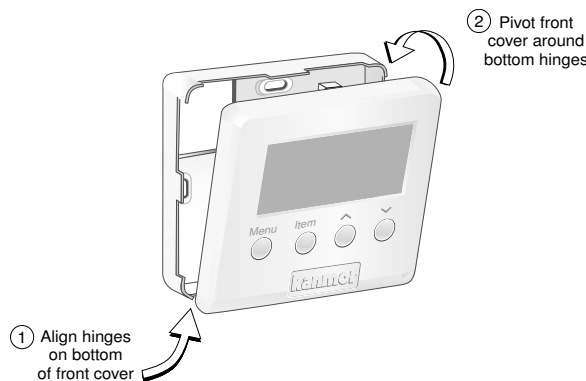

Menus

View Menu

When in the view menu, press either the ▲ or ▼ button to adjust the desired room temperature. The temperature being adjusted depends on whether the control is in the Occupied or UnOccupied mode. Refer to the control's Data Brochure for available items.

Adjust Menu

Use the Menu button to select the *Adjust* menu. In the *Adjust* menu, use the Item button to select the item to adjust, then use either the ▲ or ▼ buttons to adjust it. Refer to the control's Data Brochure for available items.

Temperature Units

The RTU is capable of displaying the temperature in either °F or °C. In order to select the temperature units, press the Menu button until the Miscellaneous (*Misc*) menu is displayed. Then, while the UNITS item is displayed, use the ▲ or ▼ button to select the desired units of measure.

Access Levels

The RTU has four access levels that restrict the number of Menus, Items, and Adjustments that can be accessed by the user. The four access levels are Limited (LTD), User (USER), Installer (INST), and Advanced (ADV).

The access level of the RTU is found in the Miscellaneous (*Misc*) menu. The access level can only be viewed and / or adjusted when the *Lock / Unlock* DIP switch of the control that the RTU is connected to is set to the *Unlock* position. To determine if the RTU's access level is currently locked or unlocked, a small segment representing a padlock is viewed in the bottom right hand corner of the display.

Limiting the Temperature Range


The adjustment range of the desired room temperature can be limited in order to avoid extreme temperature settings. Set the desired room temperature in the Adjust menu. Then go to the Miscellaneous (*Misc*) menu and select the LTD access level. If desired, set the *Lock / Unlock* DIP switch on the control to the *Lock* position so that the access level can no longer be adjusted.

As long as the RTU remains in the LTD access level the room temperature setting(s) can only be adjusted $\pm 3^{\circ}\text{F}$ ($\pm 1^{\circ}\text{C}$) from the setting that was selected when the RTU was placed into the LTD access level.

Technical Data


Room Temperature Unit (RTU) 062e

Literature	— D 062e, D 070e
Packaged weight	— 0.5 lb. (225 g), Enclosure J, white PVC plastic
Dimensions	— 2-7/8" H x 2-7/8" W x 13/16" D (73 x 73 x 21 mm)
Approvals	— CE approved, meets DOC & FCC regulations for EMI/RFI.
Ambient conditions	— Indoor use only, 32 to 122°F (0 to 50°C), < 90% RH non-condensing, Altitude < 2000 m, Installation category II, Pollution category II.
Power supply	— kanmor control; tN1
Internal Sensor	— NTC thermistor, 10 kΩ @ 77°F (25°C ±0.2°C), β=3892
Included	— 008e

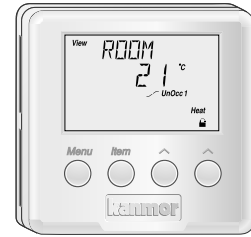

Room Temperature Unit (RTU) 063e

Literature	— D 063e, D 070e
Packaged weight	— 0.5 lb. (225 g), Enclosure J, white PVC plastic
Dimensions	— 2-7/8" H x 2-7/8" W x 13/16" D (73 x 73 x 21 mm)
Approvals	— CE approved, meets DOC & FCC regulations for EMI/RFI.
Ambient conditions	— Indoor use only, 32 to 122°F (0 to 50°C), < 90% RH non-condensing, Altitude < 2000 m, Installation category II, Pollution category II.
Power supply	— kanmor control; tN1
Internal Sensor	— NTC thermistor, 10 kΩ @ 77°F (25°C ±0.2°C), β=3892
Remote Sensors	— kanmor type #: 070e, 071e, 076e, 079e.
Included	— 008e

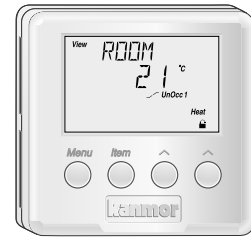

Limited Warranty and Product Return Procedure

Limited Warranty *The liability of kanmor Control Systems Ltd. ("kanmor") under this warranty is limited. The Purchaser, by taking receipt of any kanmor product ("Product"), acknowledges the terms of the Limited Warranty in effect at the time of such Product sale and acknowledges that it has read and understands same.*

The kanmor Limited Warranty to the Purchaser on the Products sold hereunder is a manufacturer's pass-through warranty which the Purchaser is authorized to pass through to its customers. Under the Limited Warranty, each kanmor Product is warranted against defects in workmanship and materials if the Product is installed and used in compliance with kanmor's instructions, ordinary wear and tear excepted. The pass-through warranty period is for a period of twenty-four (24) months from the production date if the Product is not installed during that period, or twelve (12) months from the documented date of installation if installed within twenty-four (24) months from the production date.

The liability of kanmor under the Limited Warranty shall be limited to, at kanmor's sole discretion: the cost of parts and labor provided by kanmor to repair defects in materials and/or workmanship of the defective product; or to the exchange of the defective product for a warranty replacement product; or to the granting of credit limited to the original cost of the defective product, and such repair, exchange or credit shall be the sole remedy available from kanmor, and, without limiting the foregoing in any way, kanmor is not responsible, in contract, tort or strict product liability, for any other losses, costs, expenses, inconveniences, or damages, whether direct, indirect, special, secondary, incidental or consequential, arising from ownership or use of the product, or from defects in workmanship or materials, including any liability for fundamental breach of contract.

The pass-through Limited Warranty applies only to those defective Products returned to kanmor during the warranty period. This Limited Warranty does not cover the cost of the parts or labor to remove or transport the defective Product, or to reinstall the repaired or replacement Product, all such costs and expenses being subject to Purchaser's agreement and warranty with its customers.

Any representations or warranties about the Products made by Purchaser to its customers which are different from or in excess of the kanmor Limited

Warranty are the Purchaser's sole responsibility and obligation. Purchaser shall indemnify and hold kanmor harmless from and against any and all claims, liabilities and damages of any kind or nature which arise out of or are related to any such representations or warranties by Purchaser to its customers.

The pass-through Limited Warranty does not apply if the returned Product has been damaged by negligence by persons other than kanmor, accident, fire, Act of God, abuse or misuse; or has been damaged by modifications, alterations or attachments made subsequent to purchase which have not been authorized by kanmor; or if the Product was not installed in compliance with kanmor's instructions and/or the local codes and ordinances; or if due to defective installation of the Product; or if the Product was not used in compliance with kanmor's instructions.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, WHICH THE GOVERNING LAW ALLOWS PARTIES TO CONTRACTUALLY EXCLUDE, INCLUDING, WITHOUT LIMITATION, IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, DURABILITY OR DESCRIPTION OF THE PRODUCT, ITS NON-INFRINGEMENT OF ANY RELEVANT PATENTS OR TRADEMARKS, AND ITS COMPLIANCE WITH OR NON-VIOLATION OF ANY APPLICABLE ENVIRONMENTAL, HEALTH OR SAFETY LEGISLATION; THE TERM OF ANY OTHER WARRANTY NOT HEREBY CONTRACTUALLY EXCLUDED IS LIMITED SUCH THAT IT SHALL NOT EXTEND BEYOND TWENTY-FOUR (24) MONTHS FROM THE PRODUCTION DATE, TO THE EXTENT THAT SUCH LIMITATION IS ALLOWED BY THE GOVERNING LAW.

Product Warranty Return Procedure All Products that are believed to have defects in workmanship or materials must be returned, together with a written description of the defect, to kanmor through its Representative. If kanmor receives an inquiry from someone other than a kanmor Representative, including an inquiry from Purchaser (if not a kanmor Representative) or Purchaser's customers, regarding a potential warranty claim, kanmor's sole obligation shall be to provide the address and other contact information regarding the appropriate Representative.

kanmor[®]
Control Systems

kanmor Control Systems Ltd.
5100 Silver Star Road
Vernon, B.C. CANADA V1B 3K4
250-545-2693 Fax. 250-549-4349
Web Site: www.kanmor.com